

Canadian Auto Performance

INSTALLATION GUIDE

CAP Pre Preg-Carbon Fiber Mirror Covers
B9 A4, S4, A5, S5, RS5 Install Guide



2-789 Arrow Rd,
Toronto, ON M9M 2L4, Canada

www.canautoperformance.com



This guide is for the installation of CAP's Audi Pre Preg Carbon Fiber Mirror Covers for the B9 A4, S4, A5, S5, and RS5. These carbon fiber mirror covers need to be installed by a professional or an experienced technician. Canadian Auto Performance is not responsible for any damage caused by incorrect installation.

ITEMS INCLUDED

- 1x – Driver Side CAP Carbon Fiber Mirror Cover
- 1x – Passenger Side CAP Carbon Fiber Mirror Cover



REQUIRED TOOLS:

1. Philips screwdriver
2. Prying tool



STEP 1

Park your car on a level surface and apply the parking brake. Adjust your mirror to point outwards to have more room to allow for an easier time in installing the mirror covers.





STEP 2

Using a plastic pry tool, slide it underneath the mirror and carefully pry out the lens at the bottom first then at the top.


DO NOT stick the pry tool in too far, roughly only ½” is needed, and start prying it out from the bottom left and right corners then the top left and right corner.





STEP 3


Once you have pried out the mirror, remove the three 10mm screws with a philips screwdriver as shown by the red arrows below to allow you to remove the Mirror Housing Cover.

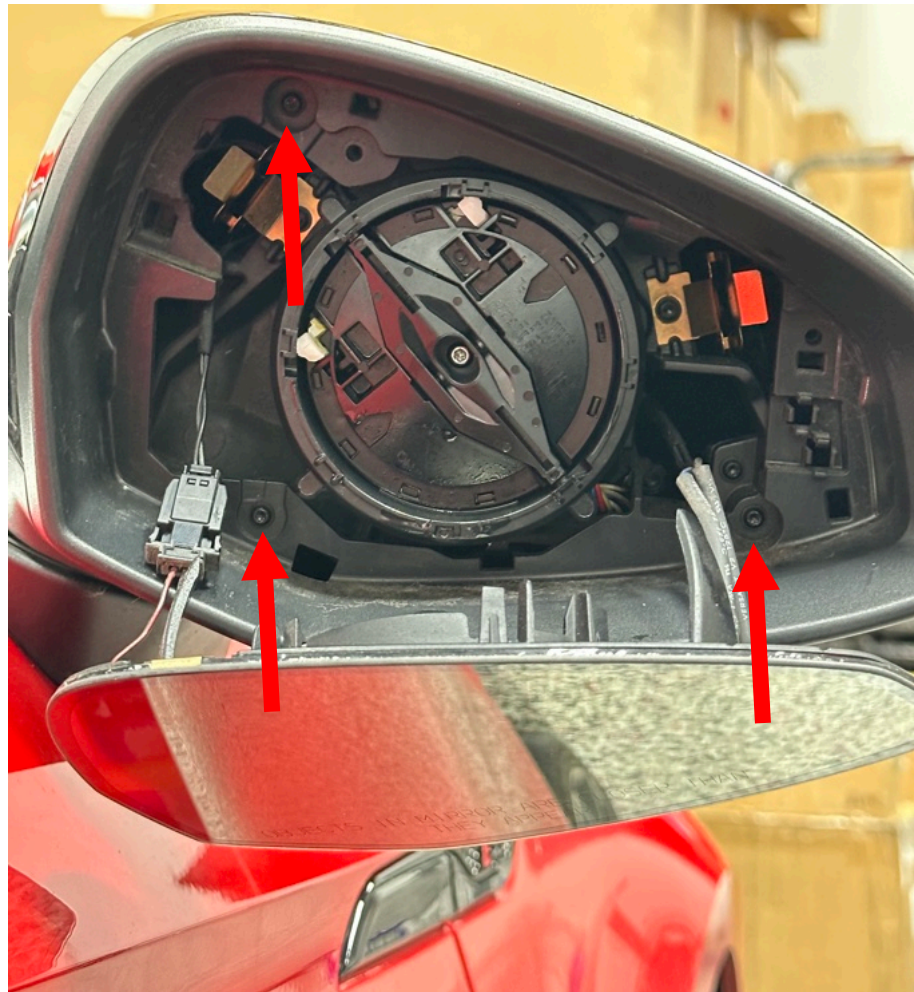



STEP 4

Remove the Mirror Housing Cover and the Mirror Cover that is currently on. You will have to unclip the side assist wire from the covers warning lamp as shown by the red arrows.

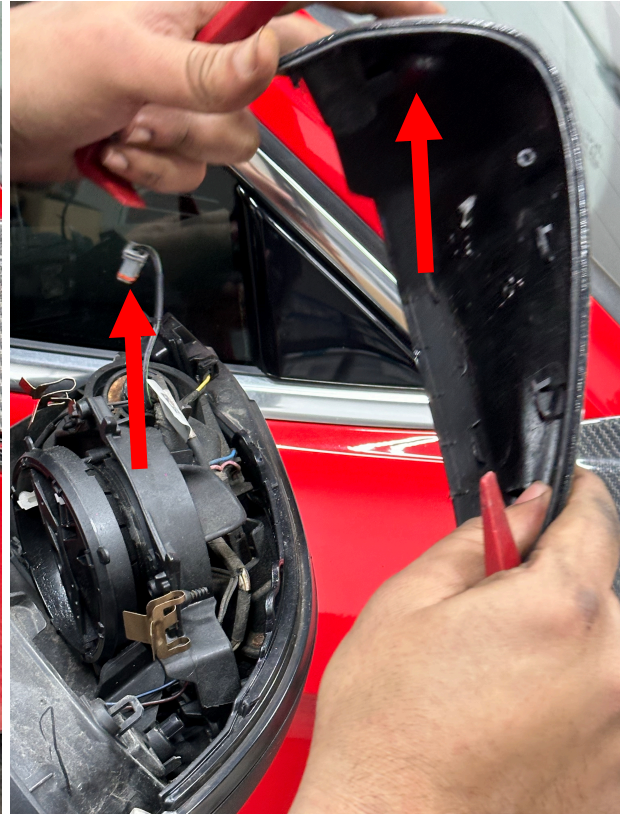



STEP 5

Press the warning lamp out of your mirror cover in the direction shown by the red arrow.





STEP 6

Attach the warning lamp from Step 5 onto the CAP Pre Preg-Carbon Fiber Mirror Cover and connect the side assist wire back to the warning lamp.

Afterwards line up your CAP Carbon Fiber Mirror with the bottom of the mirror frame and insert the Mirror Housing Cover back in. Screw back in the 10mm screws from Step 3 to hold the Mirror Housing Cover.

Attach the mirror back on by putting in the bottom side first and use minimal pressure to push it back in.





Thank You For Your Purchase


Thank you for purchasing from Canadian Auto Performance. We are dedicated to meet the needs of enthusiasts looking to modify their German vehicles with top tier quality parts. At Canadian Auto Performance, we take pride in our commitment to the highest of standards.

If you have any questions, please do not hesitate to contact us.

Canadian Auto Performance
2-789 Arrow Rd, Toronto, ON M9M 2L4, Canada

Calling from Canada: 416-613-9393
Calling from USA: 1-866-846-4288

www.canautoperformance.com

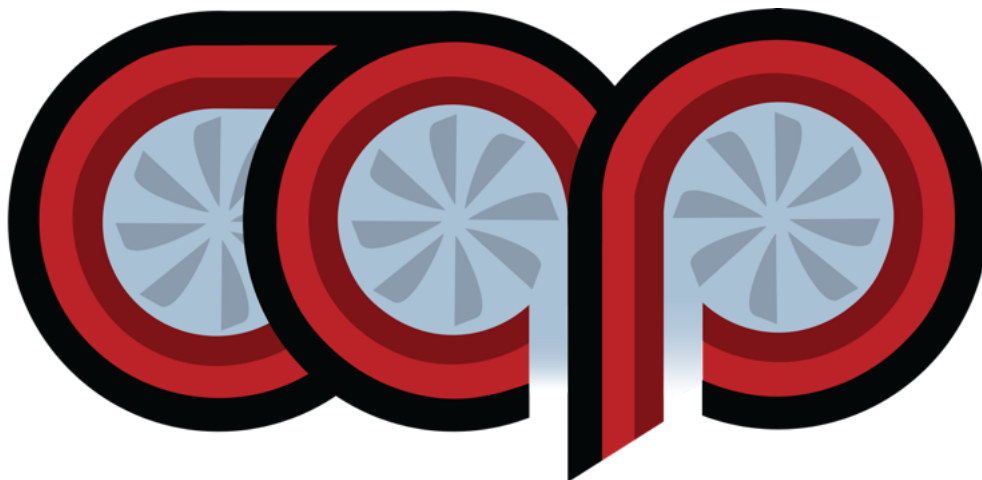

Canadian Auto Performance