

Canadian Auto Performance

INSTALLATION GUIDE

CAP 6" Velocity Stack Intake | B9/B9.5 AUDI A4/S4, A5/S5, RS4/RS5
Install Guide



2-789 Arrow Rd,
Toronto, ON M9M 2L4, Canada

www.canautoperformance.com



This guide is for the installation of CAP's Audi 3.0T B9/B9.5 Intake. This intake needs to be installed by a professional or an experienced technician. Canadian Auto Performance is not responsible for any damage caused by incorrect installation.

ITEMS INCLUDED

- 1x – Intake Pipe
- 1x - Heat Shield Assembly
- 1x - Velocity Stack
- 1x - Air Filter
- 3x – Hose Clamps
- 2x – Rubber Grommet



REQUIRED TOOLS:

- T27 Torx bit
- Phillips Screwdriver
- Flat Head Screwdriver



STEP 1

Park your car on a level surface and apply the parking brake. It is recommended to allow the car to cool down before beginning this installation procedure. Pop the hood, then remove the hood release lever by pressing the release button located on the top side of the lever as shown by the red arrow.

Afterwards remove the bumper cover by pulling down from the corners shown by the green arrows.



STEP 2


Pull and remove the engine cover from the engine bay by pulling straight up at the following corners shown by the green arrows





STEP 3

Remove the following two T27 screws as shown by the green arrows to detach the radiator support from the intake

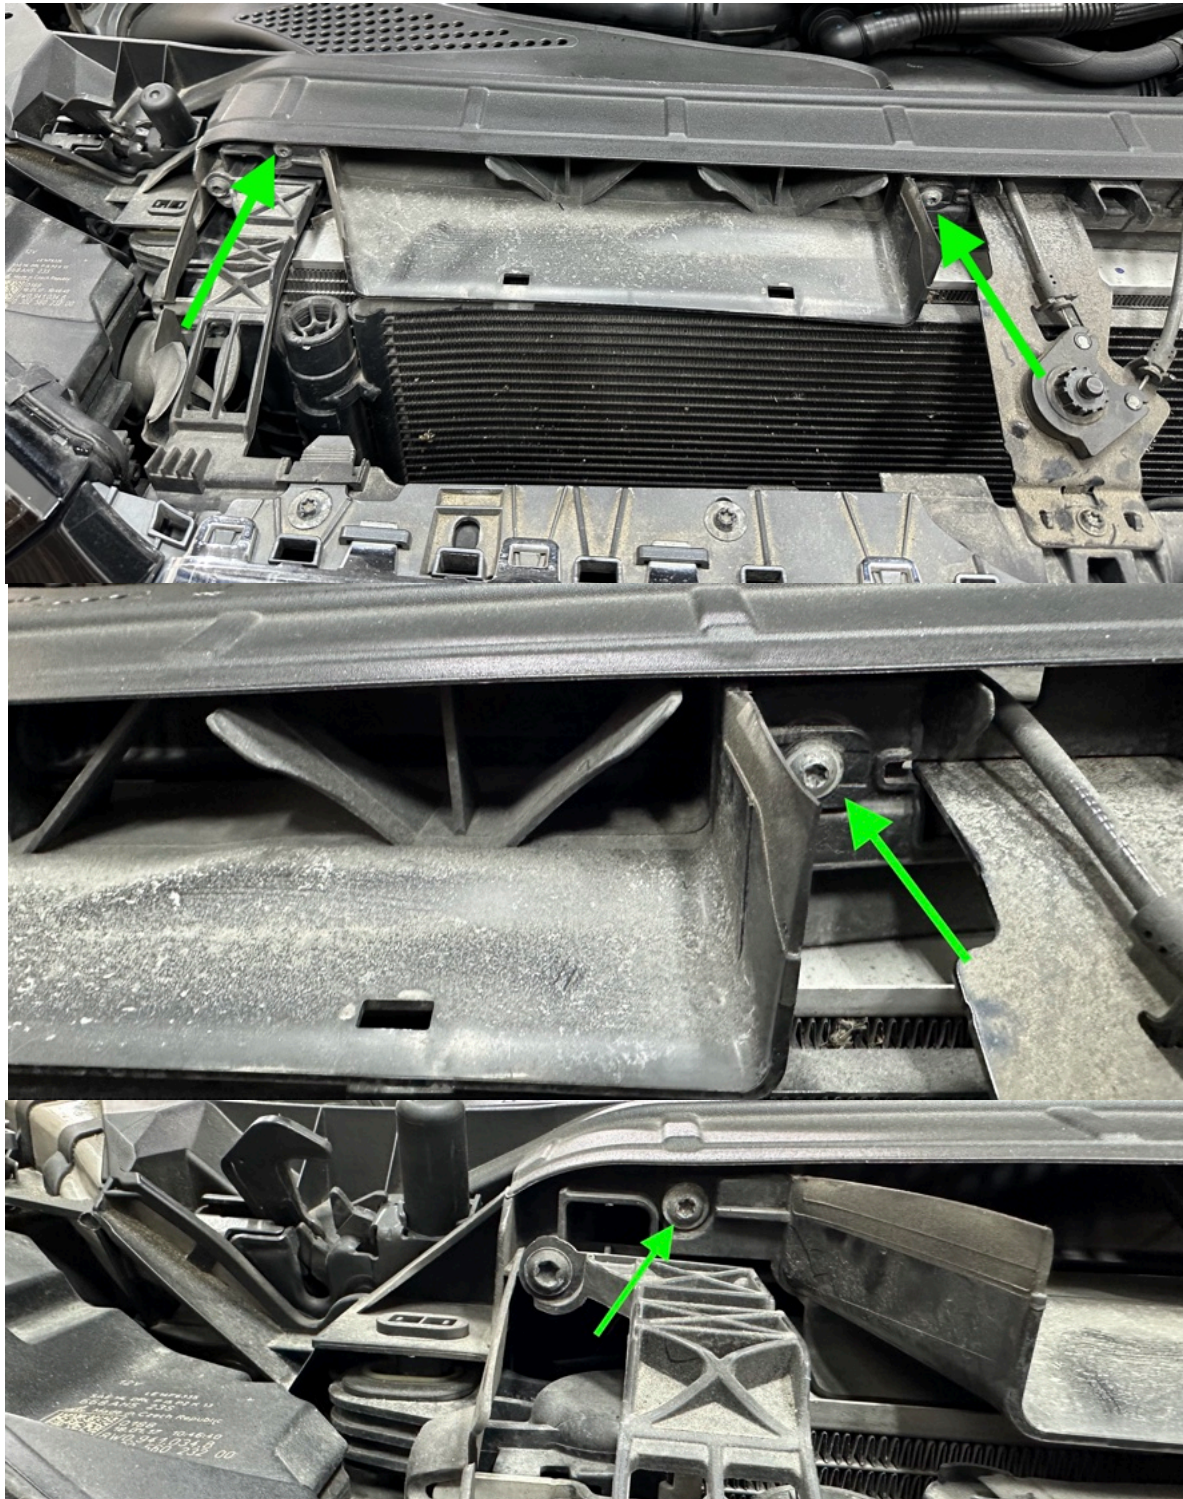

STEP 4

Untighten the band clamp connecting to both the turbo inlet and the intake box. Afterwards detach the Radiator Support from the intake box that you unscrewed from Step 3.

Finally remove the Intake box by lifting it upwards.






STEP 5

Attach the weather stripping around the CAP heatshield as shown by the green arrows.

Use your vehicles grommets and attach it to the heatshield as shown by the red arrows. Afterwards mount the heat shield by lining up the rubber grommets to the mounting holes on the engine bay.

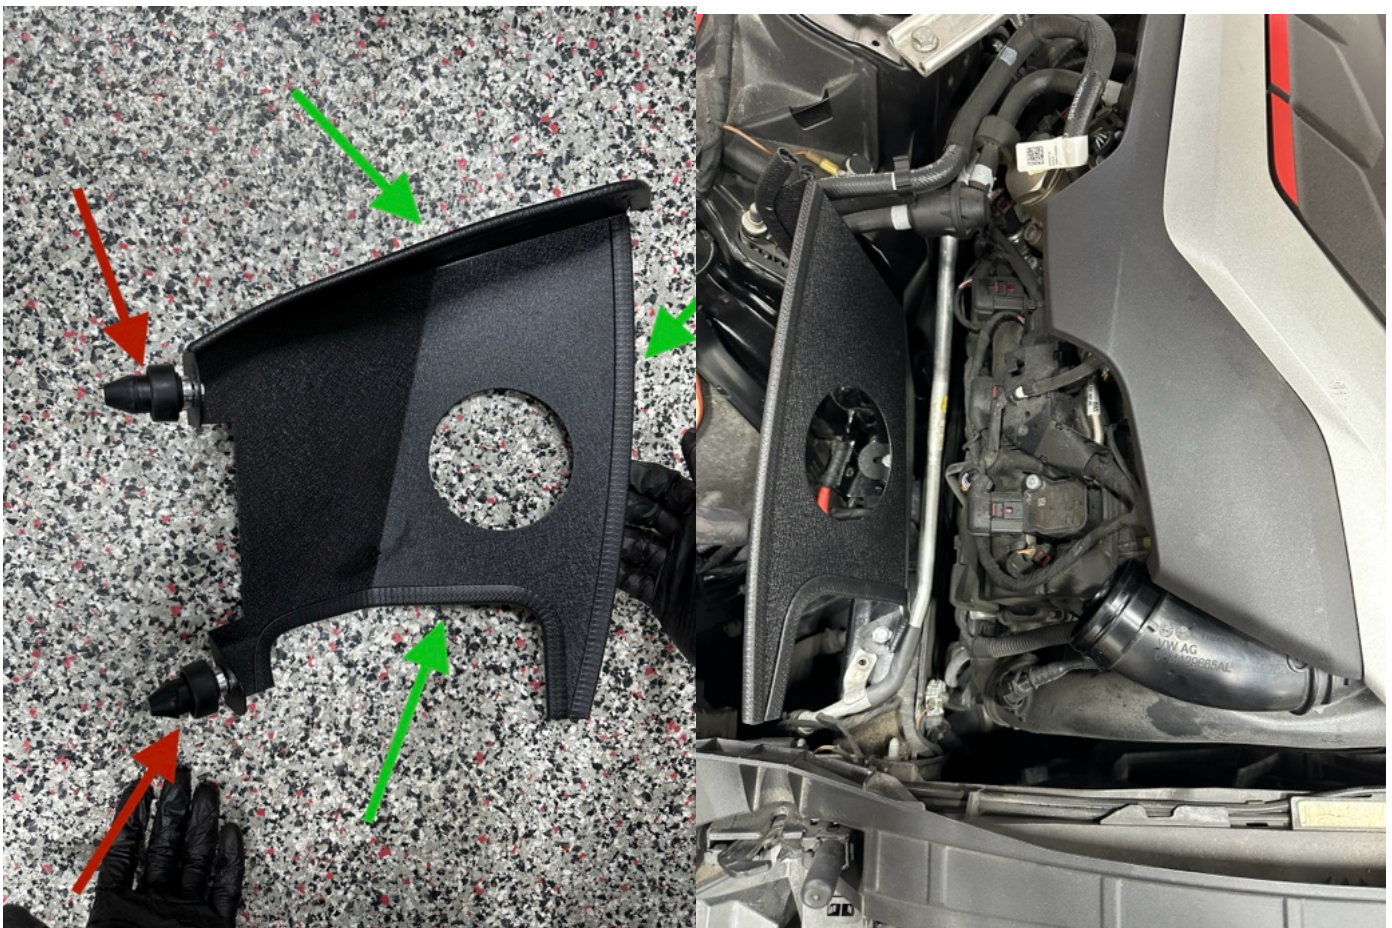



STEP 6

Thread the intake pipe through the heat shield and line up the other end with a band clamp attached to the intake pipe with the turbo inlet. Now tighten the band clamp securing the intake pipe to the turbo inlet.





STEP 7

Take your velocity stack and attach it to the air filter. Secure them together by tightening the band clamp.

Afterwards, connect the velocity stack to the intake pipe and secure it by attaching and tightening the band clamp around the intake pipe as shown by the photos below.





STEP 8

Afterwards, reinstall the engine cover, bumper cover, and radiator support back onto your vehicle that was removed in Step 1, Step 2, and Step 3.





Thank You For Your Purchase


Thank you for purchasing from Canadian Auto Performance. We are dedicated to meet the needs of enthusiasts looking to modify their German vehicles with top tier quality parts. At Canadian Auto Performance, we take pride in our commitment to the highest of standards.

If you have any questions, please do not hesitate to contact us.

Canadian Auto Performance
2-789 Arrow Rd, Toronto, ON M9M 2L4, Canada

Calling from Canada: 416-613-9393
Calling from USA: 1-866-846-4288

www.canautoperformance.com

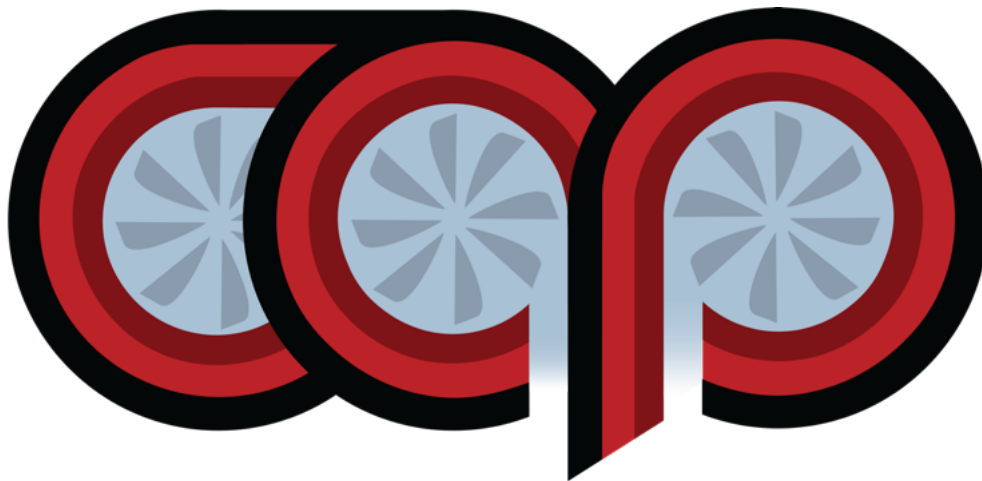

Canadian Auto Performance