

Canadian Auto Performance

INSTALLATION GUIDE

CAP 2018-2024 B9 & B9.5 Audi Q5/SQ5/Q7 Carbon Fiber Mirror Covers



2-789 Arrow Rd,
Toronto, ON M9M 2L4, Canada

www.canautoperformance.com



This guide is for the installation of CAP's B9 & B9.5 Q5/SQ5/Q7 Carbon Fiber Mirror Covers. These carbon fiber mirrors need to be installed by a professional or an experienced technician. Canadian Auto Performance is not responsible for any damage caused by incorrect installation.

ITEMS INCLUDED

- 1x – Driver Side CAP Carbon Fiber Mirror Cover
- 1x – Passenger Side CAP Carbon Fiber Mirror Cover



REQUIRED TOOLS:

- T10 Torx Screwdriver
- Pry tool



STEP 1: Removal of Mirror Lenses

Park your car on a level surface and apply the parking brake. Adjust your mirror to point outwards to have more room to allow for an easier time in installing the mirror covers.

Using a plastic pry tool, slide it underneath the mirror and carefully pry out the lens at the bottom first then at the top.

DO NOT stick the pry tool in too far, roughly only ½” is needed, and start prying it out from the bottom left and right corners then the top left and right corner.



Image 1: Prying out the mirror from underneath



STEP 2: Removal of T10 Screws from Mirror Housing Cover

Once you have pried out the mirror, remove the five T10 screws as shown by the [red arrows](#) in Image 2 and Image 3 to allow you to remove the Mirror Housing Cover.

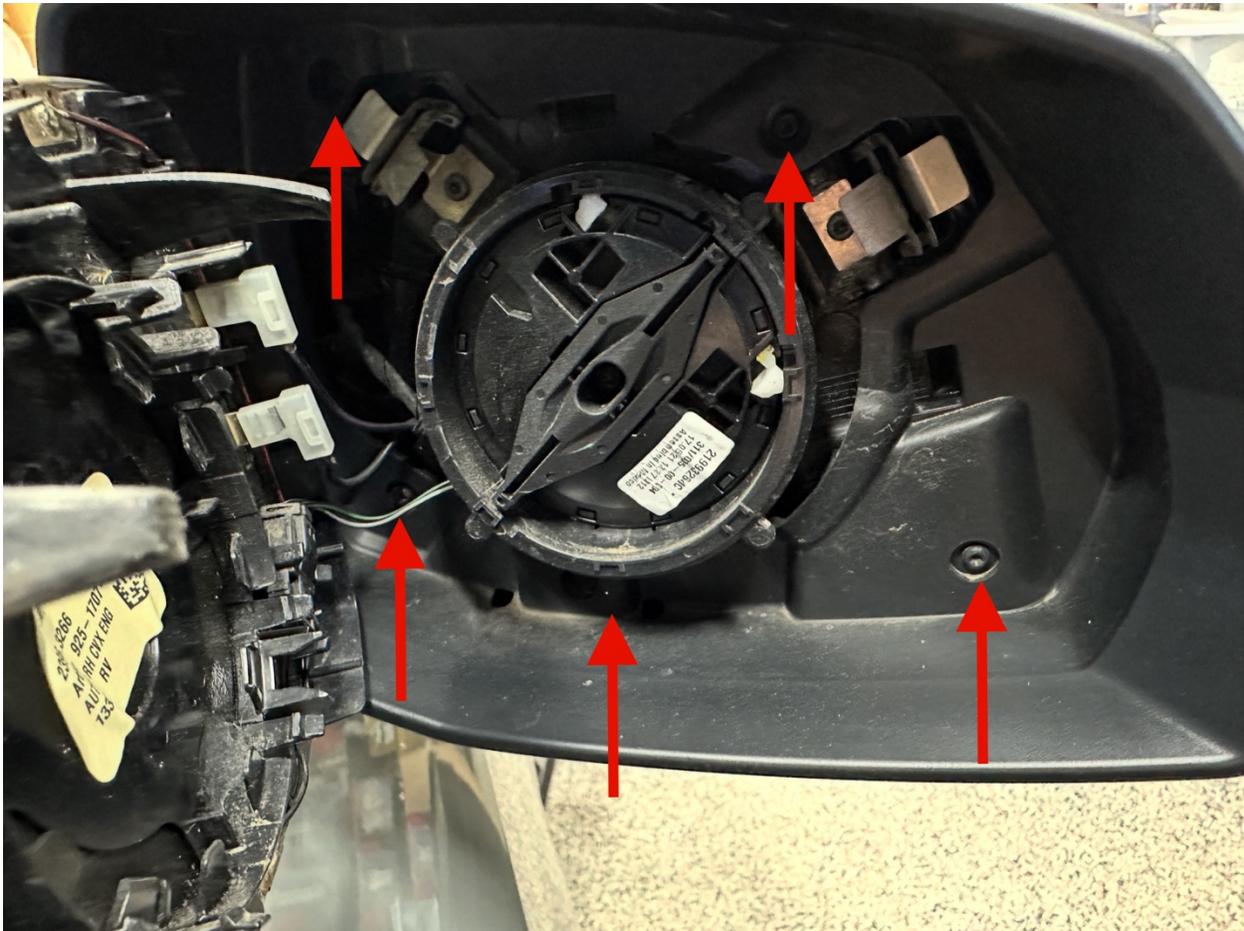


Image 2: Location of T10 Screws

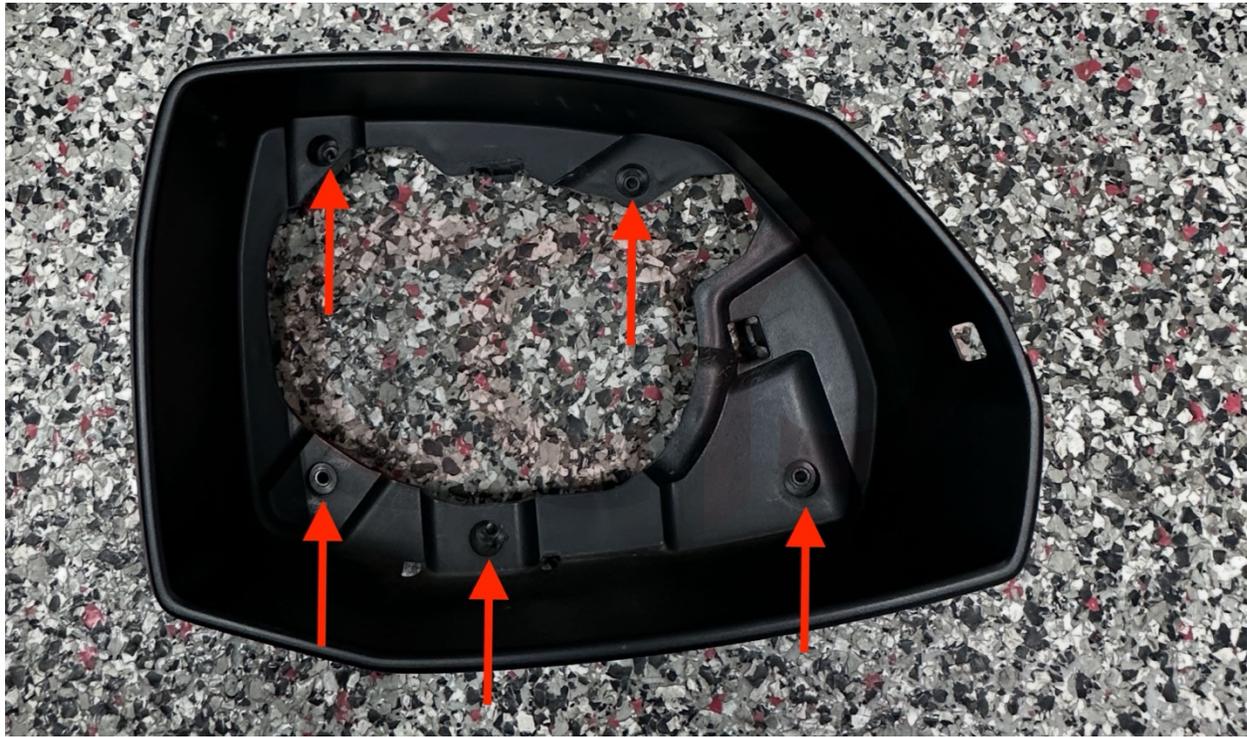


Image 3: Location of T10 Screws



STEP 3: Removal of Mirror Housing Cover

After removing the T10 screws, disconnect the mirror housing cover by prying it out as shown in Image 4 and Image 5.

Once you remove the mirror housing cover, there will be a T10 screw that is holding the OEM mirror cover that you will have to unscrew as shown by the red arrow in Image 6.



Image 4: Removal of Mirror Housing Cover



Image 5: Removal of Mirror Housing Cover



Image 6: Location of T10 Screw holding Mirror Cover

STEP 4: Removal of OEM Mirror Cover

Once you remove the final T10 screw, you will be able to detach the mirror cover as shown in Image 7.

After detaching the mirror cover, you will have to disconnect the wiring to the warning lamp module as shown by the red arrow in Image 8 and Image 9.

Afterwards, detach the warning lamp from the OEM mirror cover.



Image 7: Removal of Mirror Cover

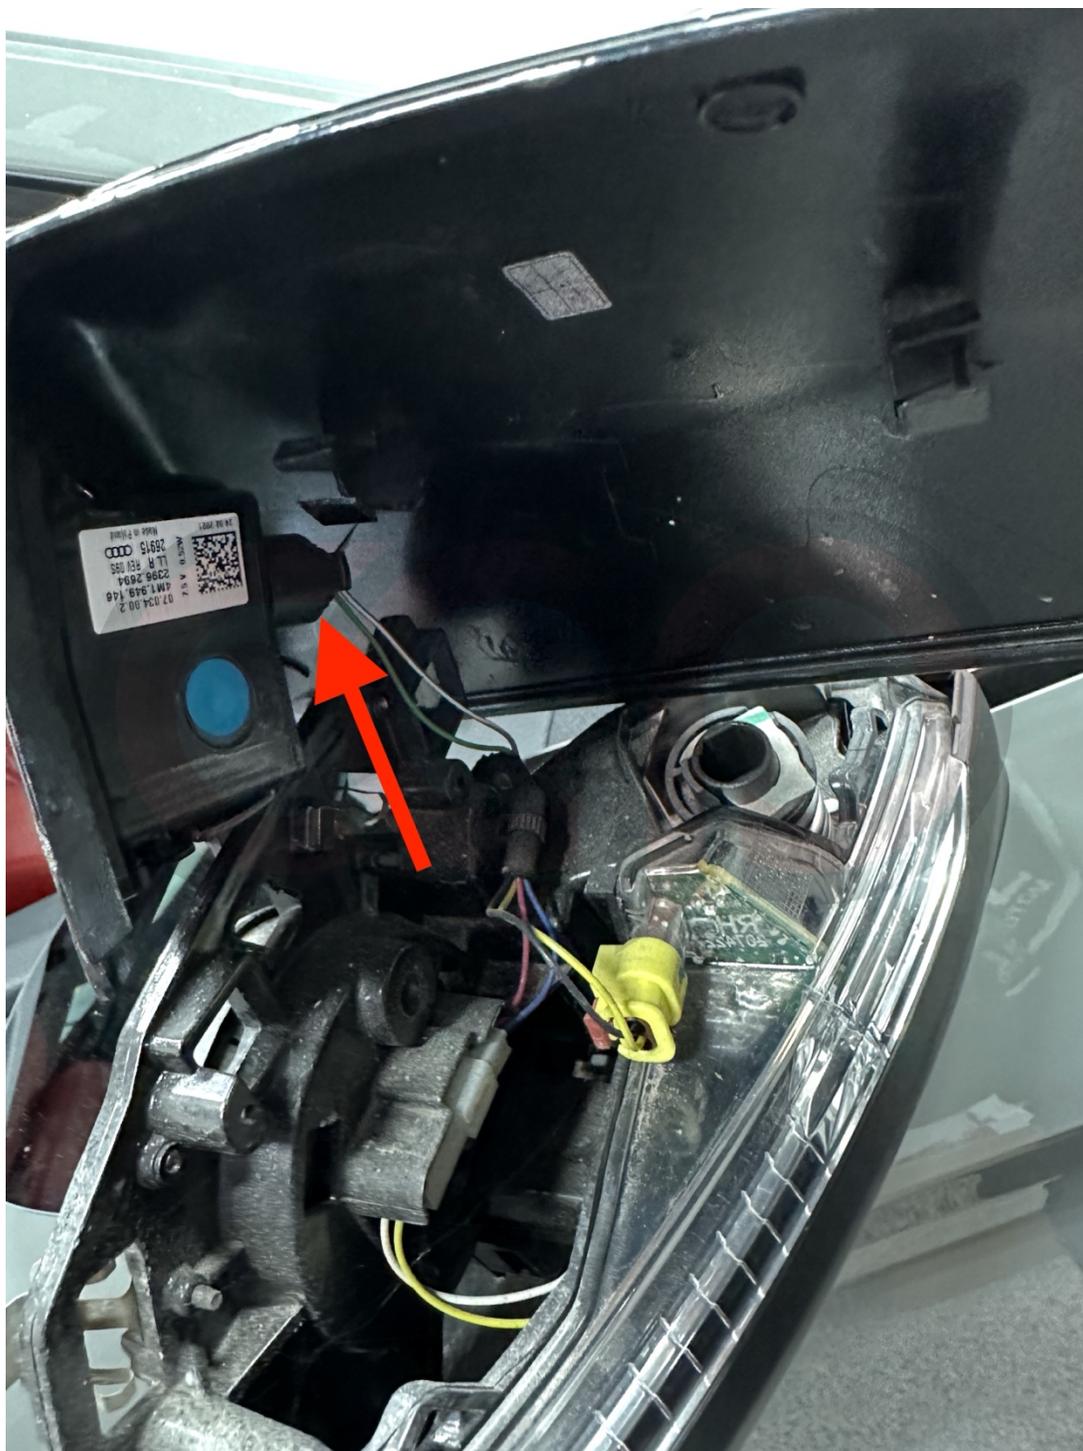


Image 8: Disconnecting Lane Assist Module



Image 9: Disconnecting Lane Assist Module



STEP 5: Installing CAP B9/B9.5 Q5/SQ5 Carbon Fiber Mirror Covers

Attach the warning lamp module to the CAP B9.5 RSQ5 Carbon Fiber Mirror Cover and connect the warning lamp wire back to the warning lamp.

Afterwards line up your CAP Carbon Fiber Mirror and connect it to the mirror frame and secure it with the T10 screw that was removed in Step 3.

Finally attach the mirror housing cover that was removed in Step 2 and secure it with the five T10 screws that were removed.



Image 10: Attach Mirror Housing Cover



Image 11: CAP B9.5 RSQ5 Mirror Cover Installed



Thank You For Your Purchase


Thank you for purchasing from Canadian Auto Performance. We are dedicated to meet the needs of enthusiasts looking to modify their German vehicles with top tier quality parts. At Canadian Auto Performance, we take pride in our commitment to the highest of standards.

If you have any questions, please do not hesitate to contact us.

Canadian Auto Performance
2 - 789 Arrow Rd, Toronto, ON M9M 2L4, Canada

Calling from Canada: 416-613-9393
Calling from USA: 1-866-846-4288

www.canautoperformance.com

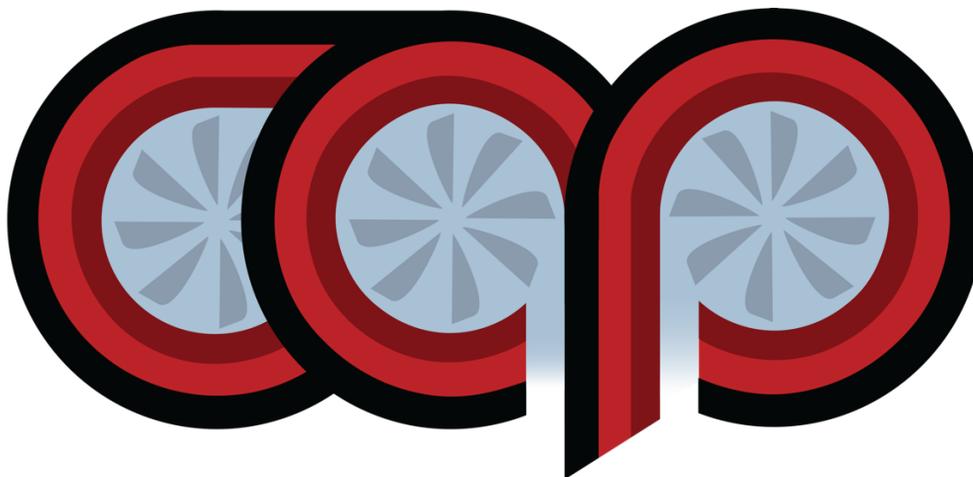

Canadian Auto Performance