

Canadian Auto Performance

INSTALLATION GUIDE

B9.5 Audi RSQ5 Fog Grilles | B9.5 Audi Q5/SQ5 Install Guide



2-789 Arrow Rd,
Toronto, ON M9M 2L4, Canada

www.canautoperformance.com



This guide is for the installation of CAP's B9.5 RSQ5 Fog Grilles. These fog grilles need to be installed by a professional or an experienced technician. Canadian Auto Performance is not responsible for any damage caused by incorrect installation.

NOTE:

Canadian Auto Performance is not responsible for any issues related to the ACC sensor functionality post-installation. Recalibration of the ACC sensors may be required if their position changes during installation. This recalibration should be performed by an authorized Audi service centre.

ITEMS INCLUDED

- 1x – CAP B9.5 RSQ5 Fog Grille Driver Side
- 1x – CAP B9.5 RSQ5 Fog Grille Passenger Side

REQUIRED TOOLS:

- Plastic Pry Tool
- T-25 torx



STEP 1: Let Vehicle Cool Down

Park your car on a level surface and apply the parking brake. It is recommended to allow the car to cool down before beginning this installation procedure.

Pop the hood, then remove the hood release lever by opening the release button located on the top side of the lever as shown by the red arrow in Image 1 and remove the radiator cover by unclipping it as shown by the blue arrows.

Then unscrew the two T25 screws as shown by the green arrows in Image 2.



Image 1: Engine Bay Hood Release Pin

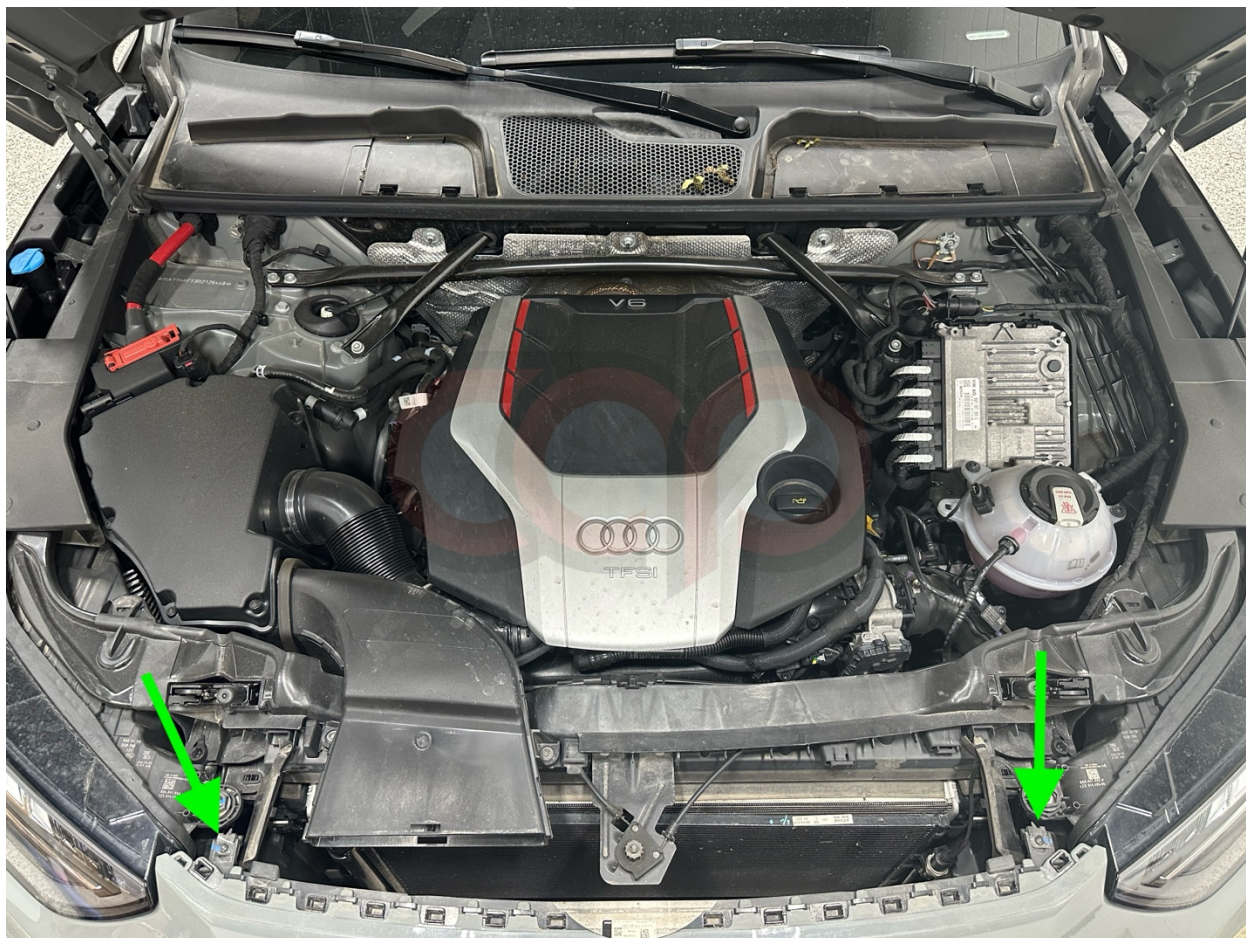


Image 2: Engine Bay T25 Screws

STEP 2: Removal of Screws to Loosen Bumper

Turn your vehicles wheels inwards to allow for space to remove three T25 screws to loosen the bumper off of the car as shown by the red arrows in Image 3.

Afterwards unscrew the one T25 screw that is located underneath the bumper to allow you to remove the trim piece as shown in Image 4 by the green arrow and Image 5.

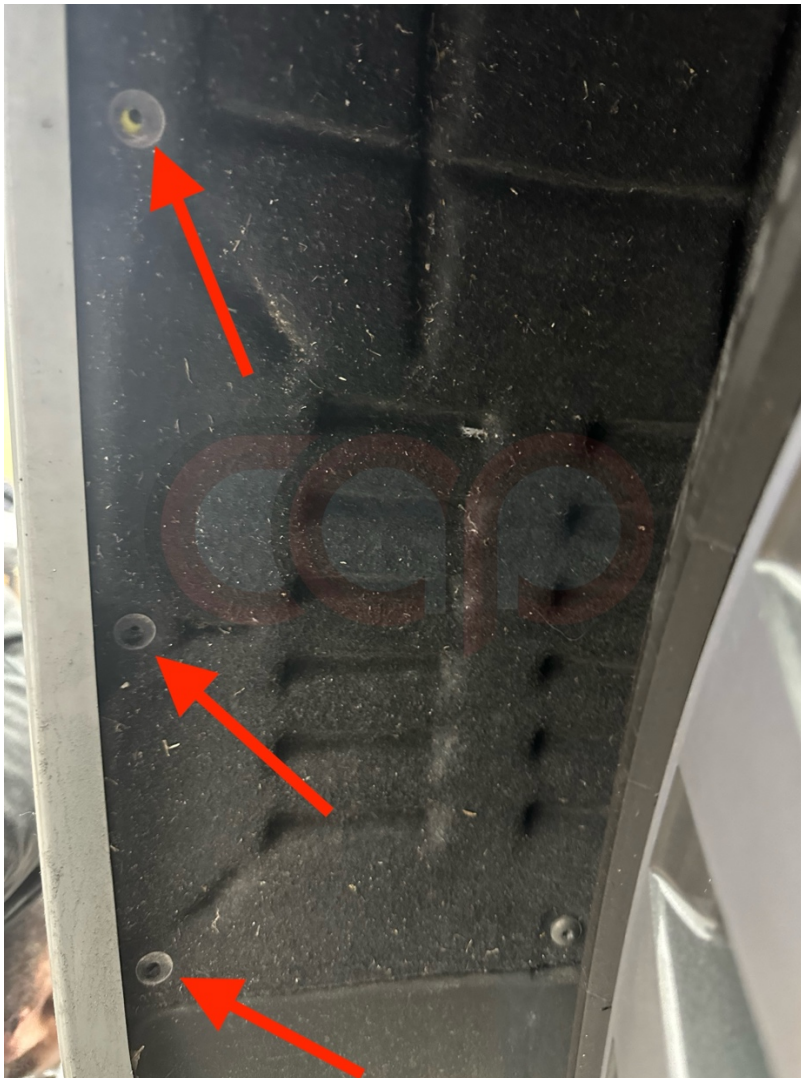


Image 3: T25 Screws behind the bumper



Image 4: T25 Screws underneath the bumper



Image 5: T25 Screws underneath the bumper and removal of trim piece

STEP 3: Removal of Screws to Loosen Bumper

Afterwards, unscrew the three T25 screw that is located behind the trim piece as shown in Image 6 by the red arrows.

Finally, unscrew the T25 screw hidden on the underneath the upper corner of the bumper as show in Images 7 & 8 by the green arrows.

NOTE: Complete steps 2 and 3 for the other side of your bumper as well.

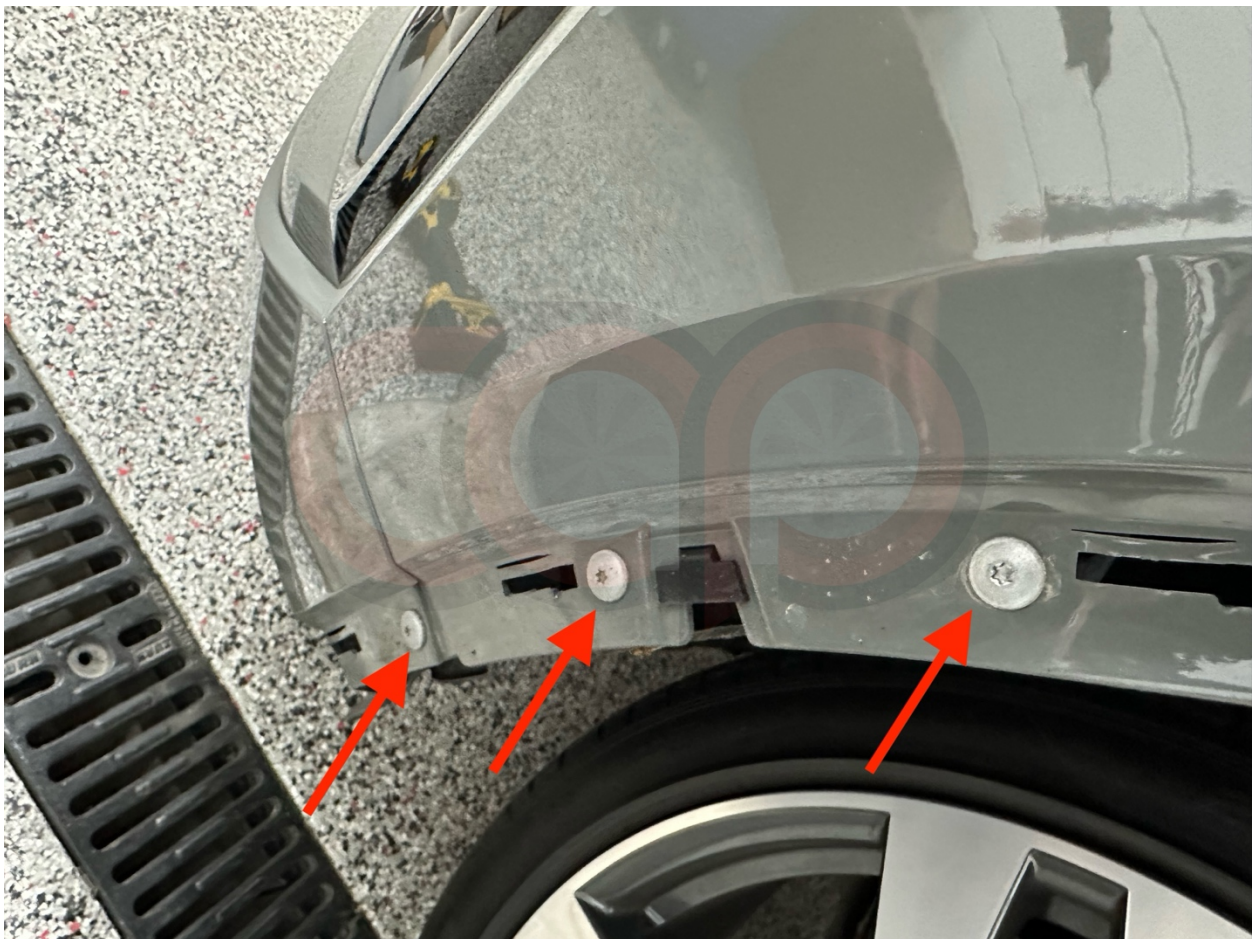


Image 6: T25 Screws behind the fender trim piece



Image 7: T25 Screw hidden underneath the corner of the bumper



Image 8: T25 Screw hidden underneath the corner of the bumper

STEP 4: Removal of Screws from the Undertray

Next, you will have to remove ten T25 Screws from the undertray shown by the arrows in Images 9,10,11, and 12.

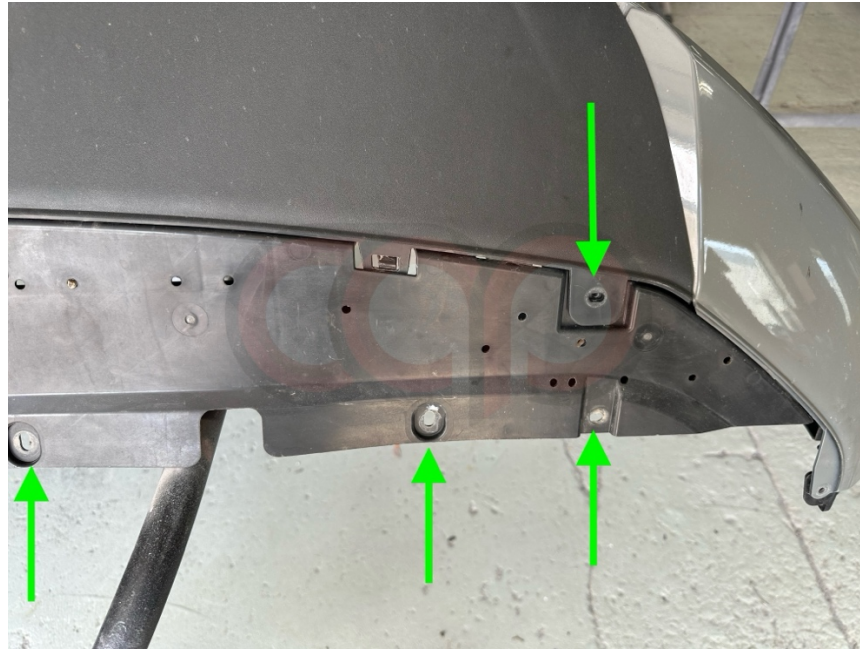


Image 9: T25 Screw positions from the undertray

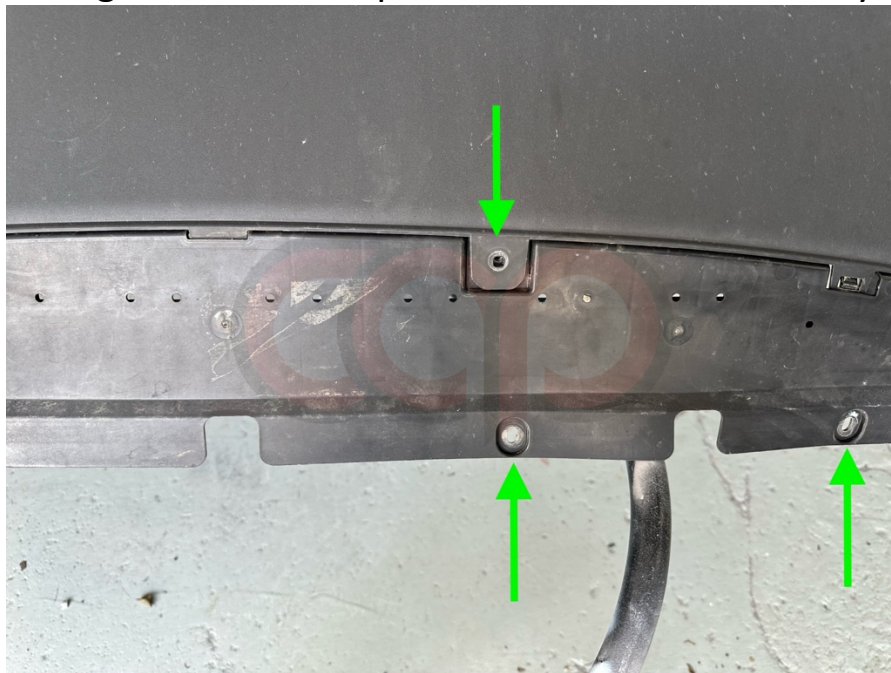


Image 10: T25 Screw positions from the undertray

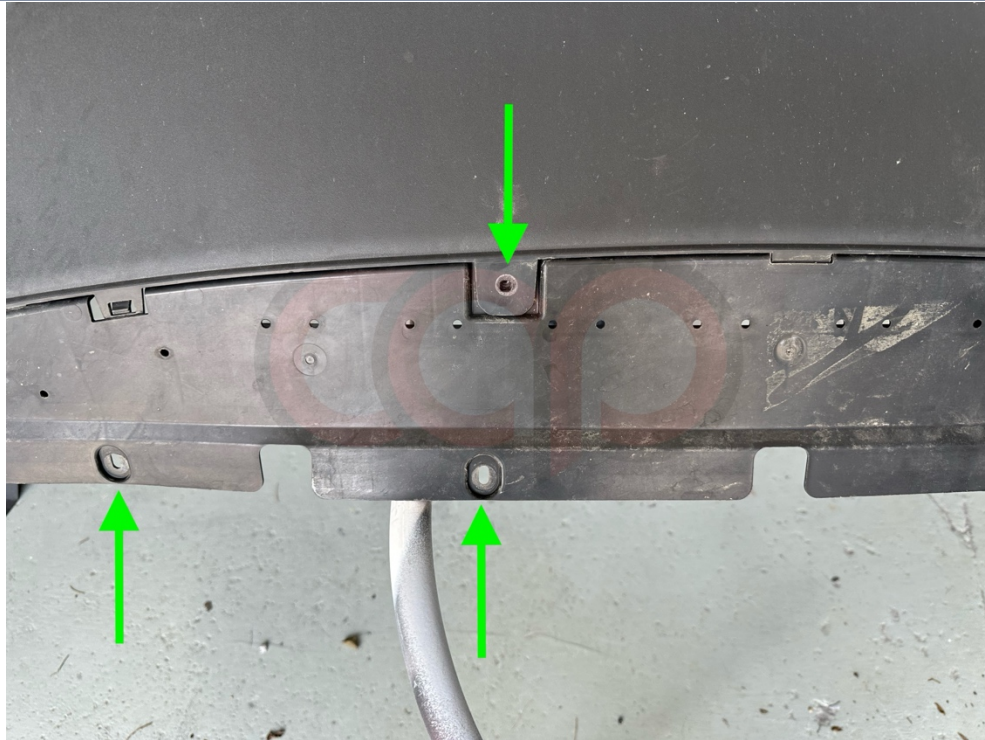


Image 11: T25 Screw positions from the undertray

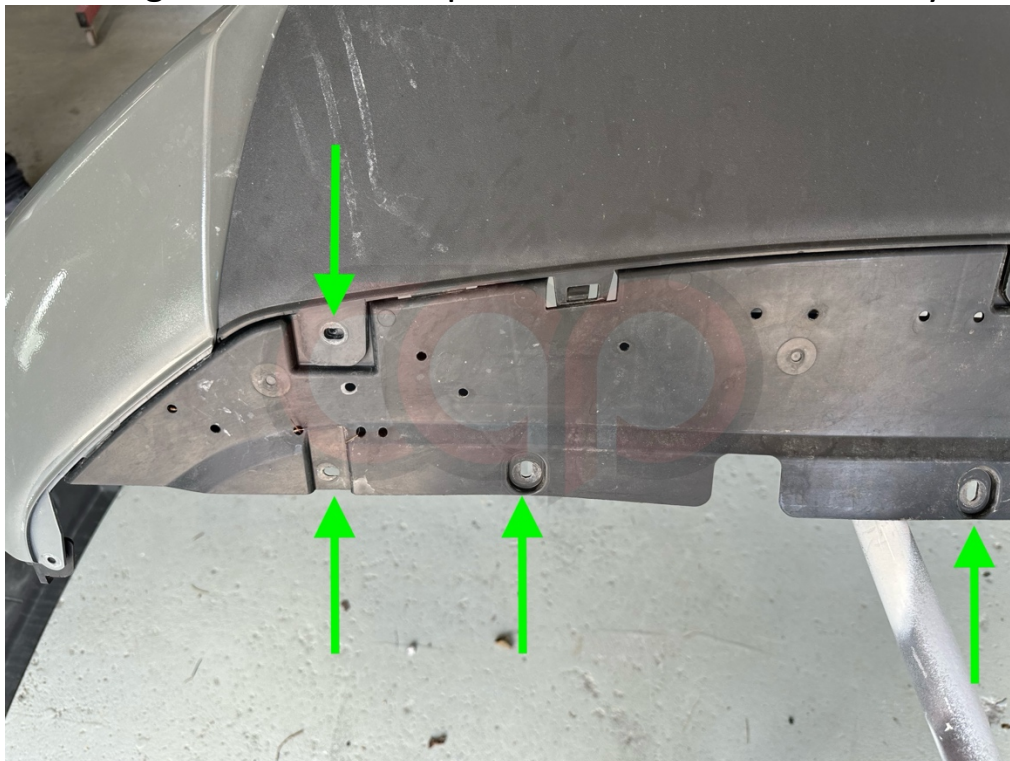


Image 12: T25 Screw positions from the undertray

STEP 5: Removing the Bumper and Disconnecting Sensors

With all the screws removed from the bumper, you can now detach the bumper from the vehicle. Ensure to disconnect all the sensors from the bumper.



Image 13: Removal of Bumper

STEP 6: Disconnecting Sensors from Fog Grilles

Disconnect the sensors from the fog grilles as shown by the red arrows in Image 14 & Image 15.



Image 14: Passenger Side Fog Grille



Image 15: Driver Side Fog Grille

STEP 7: Replacing OEM Fog Grilles with CAP RSQ5 Fog Grilles

Using a prying tool, pop out all the tabs connecting the fog grille to the bumper as shown in Image 16.

Afterwards, line up the tabs of the CAP B9.5 RSQ5 Fog grilles and pop it into the bumper as shown in Image 17.

Reattach the sensors from Step 6 to the CAP B9.5 RSQ5 Fog grilles



Image 16: Disconnecting tabs from the bumper

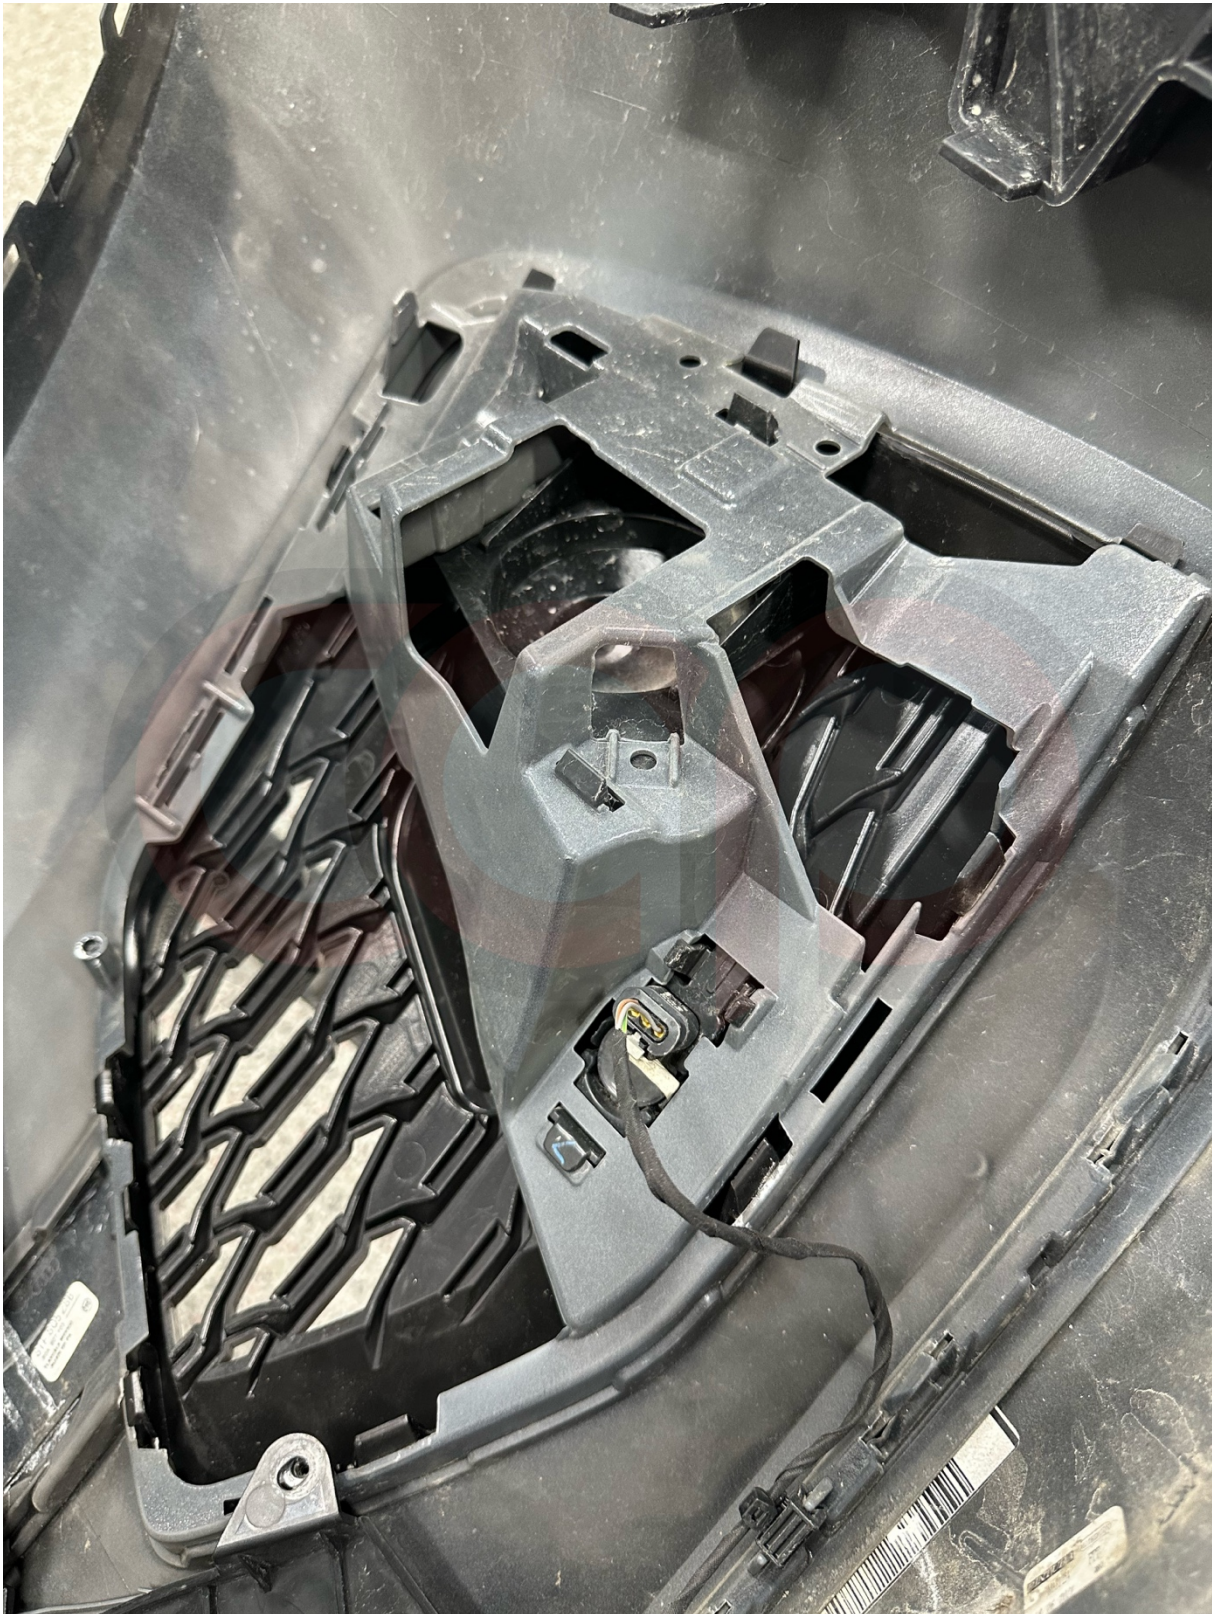


Image 17: Lining up CAP B9.5 RSQ5 Fog Grille



STEP 8: Attaching Bumper to Vehicle

After reconnecting all the sensors, align the bumper with the vehicle and secure it by screwing the T25 screws (removed in Step 4) back into place from underneath.

Afterwards, secure the side of the bumper with the T25 screws (removed in Step 2 and 3) back into place.

Once the bumper is lined up to the vehicle, secure the bumper using the two T25 screws in Step 1 in the positions shown in Image 2.

Afterwards, attach the radiator cover back onto the vehicle and attach the hood release pin from Step 1.



Thank You For Your Purchase


Thank you for purchasing from Canadian Auto Performance. We are dedicated to meet the needs of enthusiasts looking to modify their German vehicles with top tier quality parts. At Canadian Auto Performance, we take pride in our commitment to the highest of standards.

If you have any questions, please do not hesitate to contact us.

Canadian Auto Performance
2 - 789 Arrow Rd, Toronto, ON M9M 2L4, Canada

Calling from Canada: 416-613-9393
Calling from USA: 1-866-846-4288

www.canautoperformance.com

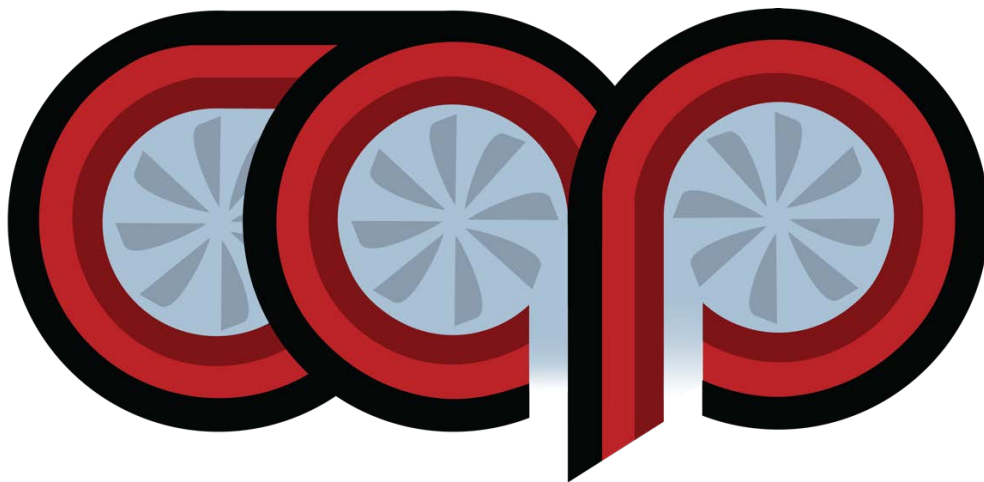

Canadian Auto Performance