



# INSTALLATION GUIDE

[CAP Dry Carbon Fiber Mirror  
Covers - v2|2017-2025 B9/B9.5  
Audi A4, S4, A5, S5, RS5](#)

Prefer a video walkthrough? [Watch the full installation process here.](#)

## **CAP Dry Carbon Fiber Mirror Covers - v2 | 2017-2025 B9/B9.5 Audi A4, S4, A5, S5, RS5**



### **ITEMS INCLUDED**

- Driver-side pre-preg dry carbon fiber mirror cover
- Passenger-side pre-preg dry carbon fiber mirror cover

### **TOOLS REQUIRED**

- prying tools
- T10 Torx bit

### **IMPORTANT**

Use plastic trim tools and work slowly around the mirror glass and housing. Do not force the glass or cover clips. Disconnect any side-assist / warning-light wiring carefully before fully removing components.



# INSTALLATION GUIDE

CAP Dry Carbon Fiber Mirror  
Covers - v2|2017-2025 B9/B9.5  
Audi A4, S4, A5, S5, RS5

**1**

## POP OUT THE MIRROR GLASS

Using the prying tool, pop out the mirror.



**2**

## DISCONNECT THE MIRROR WIRES


Behind the mirror will be two wires. Disconnect them to create space.



**3**

## REMOVE THE T10 SCREWS

Remove the three T10 screws.

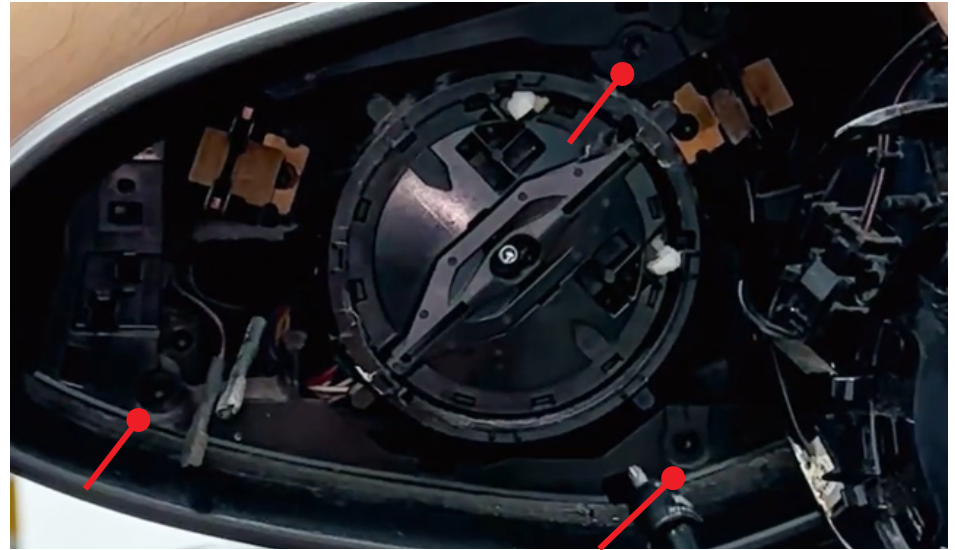

**4**

## REMOVE THE MIRROR HOUSING COVER

Remove the mirror housing cover with the prying tool.





# INSTALLATION GUIDE

CAP Dry Carbon Fiber Mirror  
Covers - v2|2017-2025 B9/B9.5  
Audi A4, S4, A5, S5, RS5

**5**

## REMOVE THE MIRROR COVER


Once the housing cover is off, remove the mirror cover by pushing on the clips.



**6**

## DISCONNECT THE SIDE-ASSIST WIRE

Disconnect the side-assist wire.

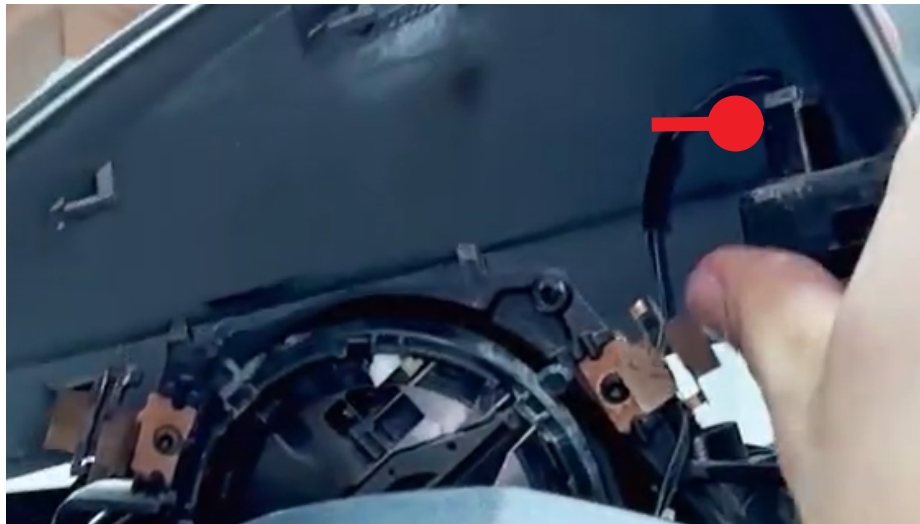

**7**

## REMOVE THE SIDE-ASSIST ADAPTER


Remove the side-assist adapter from the mirror cover.



**8**

## TRANSFER THE ADAPTER AND WIRE

Attach the adapter and the wire to the carbon fiber mirror cover.

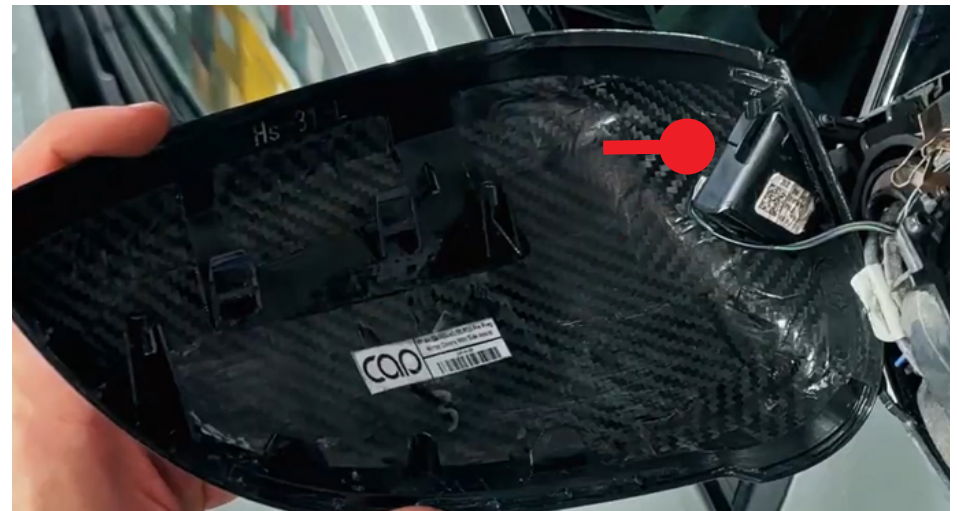




# INSTALLATION GUIDE

CAP Dry Carbon Fiber Mirror  
Covers - v2|2017-2025 B9/B9.5  
Audi A4, S4, A5, S5, RS5

**9**

## ATTACH THE COVER

Connect the highlighted tabs and attach the cover.

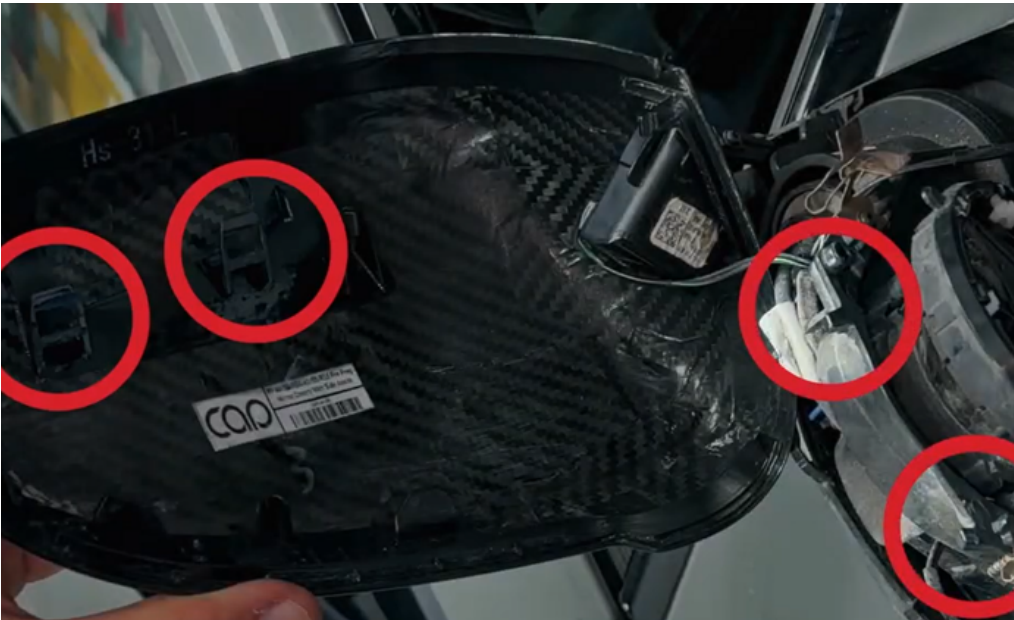

**10**

## REATTACH THE MIRROR HOUSING

Reattach the mirror housing by lining it up and reinstalling the T10 screws.



**11**

## CLIP THE MIRROR BACK IN

Reconnect the two mirror wires from Step 2, line up the mirror glass with the retaining clips, and press it back into place.



# INSTALLATION GUIDE

CAP Dry Carbon Fiber Mirror  
Covers - v2|2017-2025 B9/B9.5  
Audi A4, S4, A5, S5, RS5

## CAUTION

Confirm the lip is aligned and securely attached before driving.



Both carbon mirror covers are fully clipped into the lower housings.



Mirror glass is fully seated and secure on both sides.



Side-assist / warning-light modules are installed and connected.



Mirror adjustment and warning-light functions operate normally where equipped.



# INSTALLATION GUIDE

CAP Dry Carbon Fiber Mirror  
Covers - v2|2017-2025 B9/B9.5  
Audi A4, S4, A5, S5, RS5

**FINAL RESULT**

**INSTALLATION COMPLETE**



**Can Auto Performance**

## **THANK YOU FOR YOUR PURCHASE**

Thank you for choosing Can Auto Performance. If you have any questions regarding installation, please [contact us.](#)

[www.canautoperformance.com](http://www.canautoperformance.com)